

Scoreboard Operator's Instructions

MPCW-7 Control




Some features on the keyboard overlay may not be included on the particular model being operated.



Since 1934

QUICK START GUIDE

With the scoreboard on and the control on the main time screen you are ready to set the time for the first period of play.

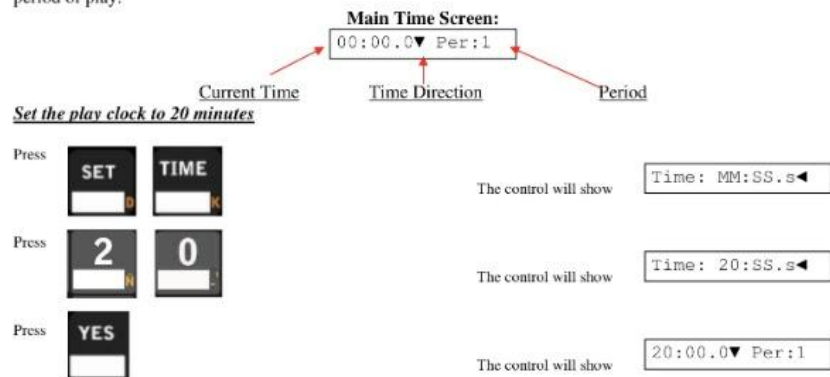

You are now ready for the game to begin.

To Start the Clock



To Stop the Clock



To Silence Auto Horn



Score



To Add To Goal Shots



Goal Saves



Then press a number key to add to the total value

To Set Period



Then press a number key to set the value

Keyboard Function

YES key



Use to accept settings, confirm data input, and to navigate through options menu.

NO key



Use to cancel an operation, reset changes in the process of making them, exit a sub-options menu, and to send the MPCW-7 back to the screen that displays the name of the sport being played.

SET key



Use ahead of a function key to directly enter a value, set times, and correct errors. These functions will be further described throughout the manual.

HORN key



Press to sound the scoreboard horn. Release the key to stop the horn.

NOTE: The duration of the horn is limited to 4 seconds.

SCROLL PROFILES key



Press to view profiles and sports. Each key press moves to the next profile/sport.

OPTIONS key



Press to enter and move through the options menu. Each press of the OPTIONS key moves to the next option in the options menu.

TIME OF DAY Key




Press TIME OF DAY to verify the time set within the control and display the time on the scoreboard.

MAIN TIME

- Is the time displayed on the scoreboard to keep track of game time.
- Can count down or up.
 - To change direction of main time refer to the OPTIONS section of this manual

To Start and Stop Main Time



1. Press  to start main time.
2. If time is 00:00.0 and is set to down time needs to be reset to start.
3. If time is set to up time will start anywhere.



 
There are two ways to stop main time.

1. End time – If time reaches 00:00.0 when time is set to down. The auto horn will sound for four seconds.



2. Press  to stop main time.

To Set Main Time

1. Press  then  the control will then display. 
2. Enter the Minutes, Seconds, and Tenth Second as needed.
 - a. After all five digits are filled it automatically accepts the time.
 - b. If less than 5 digits are entered and YES is pressed, then zeros will be placed in the unfilled digits and the time will be accepted.

Example

1. An entry of 1, 2, 3, 4, 5 will set the time to 12 minutes 34 seconds and 5 10s of second (12:34.5)
2. An entry of 1, 2, YES/CONFIRM will set time to 12 minutes (12:00.0)

Note: Pressing NO at any point before the 5th digit is pressed in the time entry process will reset time to previous values

Example

1. Time is set to 10:00.0
2. SET > TIME is pressed and an entry of 1, 2, 3, 4 is entered.
3. NO/CANCEL is pressed.
4. Time will then be set to 10:00.0

SCORE



Press **HOME SCORE** to enter the home score ADD mode.

The control will display



Press **GUEST SCORE** to enter the guest score ADD mode.

The control will display

Adding to Score



1. Press or

2. The control will display or

3. Enter any value 0-9 and it will add that value to the value with the "+".
a. To add more start from step 1

Note:

1. You cannot subtract from the value. To correct a mistake refer to Setting Score
2. The goal light will automatically light up when home or guest score is entered

Setting Score



1. Press then or

2. The control will display or

3. 1st digit: Enter any value 0-9

a. If that single digit value is the desired setting, then press YES, if not continue to step 4

4. 2nd digit: Enter any value 0-9

5. 3rd digit: Enter any value 0-9

Note:

1. A zero in the 10's spot will automatically be removed and leave a single digit value.



At any time before the 1's digit is placed can be pressed to restore the previous value and cancel the function.

NEW MINOR



Press Home **NEW MINOR**

The MPCW-7 will display



Press Guests **NEW MINOR**

The MPCW-7 will display

To Add a New Minor Penalty



1. Press or

2. The control will display

3. Enter the player number

4. The control will display



5. Press to accept the default penalty time (to set default penalty time see Hockey Options) OR if you want to enter a different penalty time or if you do not have a default penalty time press the number keys to enter penalty time.

NEW MAJOR



Press Home **NEW MAJOR**

The MPCW-7 will display



Press Guests **NEW MAJOR**

The MPCW-7 will display